

# innovaphone

PURE IP-COMMUNICATIONS



## **IP65**

Safety and Regulatory Instructions  
Declaration of Conformity  
Quick Reference Guide

## Safety Instructions

For safe and efficient operation of the handset, observe the guidelines given in all necessary safety precautions when using the handset. Follow the operating instructions and adhere to all warnings and safety precautions located on the product and the manual.

This product shall only be used with the following battery:

Art. No: 50-00060-028

Single chargers shall only be connected with power adapters supplied by the manufacturer. Available power adapters are:

For EU Art. No.: 50-00060-001

For UK Art. No.: 50-00060-002

## Regulatory Compliance Statements

The model to which this document relates to has the designation DH7.

This equipment is intended to be used in the whole EU & EFTA.

This equipment is in compliance with the essential requirements and other relevant provisions of R&TTE Directive 1999/5/EC and 2009/125/EC (EcoDesign).

This equipment conforms to Directive 2011/65/EU (RoHS).

The equipment is marked with the label



## Modifications

Changes or modifications to the equipment not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

## Environmental Requirements

### Handset

- Only use the handset in temperatures between 0 °C to 40 °C.
- Avoid exposing the handset for direct sunlight or close to other heat sources.
- Do not expose the handset to open flame.
- Keep the handset away from excessive heat and moisture.
- Avoid volume levels that may be harmful to your hearing. Exposure to excessive sounds pressure from handset's earpiece or headset may cause permanently hearing loss.
- Don't use the backside of the phone when it rings or the hands-free mode is activated. The phone may cause noise in hearing aids or cause them to overload. Please contact with the vendor of your hearing aid.
- Avoid sudden temperature changes to prevent condensation in the handset. It is recommended to put the handset into an air tight plastic bag until the temperature is adjusted, for example, when entering or leaving a cold/heated building on a warm/cold day.
- Protect your handset from aggressive liquids and vapors.
- If the handset has been exposed for water or condense, remove the battery immediately and let it dry completely before re-inserting the battery.
- Keep the handset away from strong electromagnetic fields.
- Do not place a cold telephone in a charger.
- Do not put the charger in bathrooms and shower rooms. The charger is not splash proof.

- Do not use the handset in potentially explosive environments, for example paint shops and coating workshops.
- This document must accompany the headset when it is handed on.

The phone can not be used during a power failure. It can also not be placed an emergency call.

## **Battery**

- Do not immerse the battery into water. This could short-circuit and damage the battery.
- Do not expose a battery to an open flame. This could cause the battery to explode.
- Do not allow the metal contacts on the battery to touch another metal object. This could short-circuit and damage the battery.
- Do not leave a battery where it could be subject to extremely high temperatures, such as inside a car on a hot day.
- Use the desktop charger or the wall mounted charging rack for charging. Change the battery for at least one hour the first time you use the battery.
- For better performance and longer life cycle it is recommended to charge the battery between 5 °C to 40 °C. Charging beyond these conditions may impair the battery performance and shorten the life cycle.
- Do not attempt to take a battery apart.
- Do not remove the battery, unless it needs to be replaced.
- It is recommended to power the handset off before removing the battery.

Defective batteries must be returned to a collection for chemical waste disposal.

# **Konformitätserklärung**

## **Declaration of Conformity**

### **Déclaration de Conformité**

Wir / We / Nous

innovaphone AG  
Böblinger Str. 76  
71065 Sindelfingen

erklären in alleiniger Verantwortung, dass das  
Produkt

declare under our sole responsibility that our product  
déclarons sous notre seule responsabilité que le  
produit

IP DECT Handset innovaphone IP65  
DH7-MBAA  
with Bluetooth connectivity

auf das sich diese Erklärung bezieht, mit folgenden  
Normen übereinstimmt:

to which this declaration relates conforms to the  
following standards:

auquel se réfère cette déclaration est conforme aux  
normes:

EN 50360:2001

EN 60950-1:2006 +A1:2010 + A11:2009 + A12:2011

EN 301 489-1 v1.9.2

EN 301 489-6 v1.3.1

EN 301 489-17 v2.1.1


EN 301 406 v2.1.1

Parts of EN 300 328 v1.7.1 (2006-10)

entsprechend den grundlegenden Anforderungen  
gemäss Artikel 3 der nachstehenden EU-Richtlinien  
following the essential requirements according to  
article 3 of the following EC-Directives  
conformément exigences essentielles de l'article 3 de  
les Directives CE

R&TTE 1999/5/EC


Sindelfingen, den 12.12.2016  
innovaphone AG

A handwritten signature in black ink, appearing to read 'C. Bode'.

Carsten Bode,  
Leiter Entwicklung

# Quick Reference Guide

## IP65

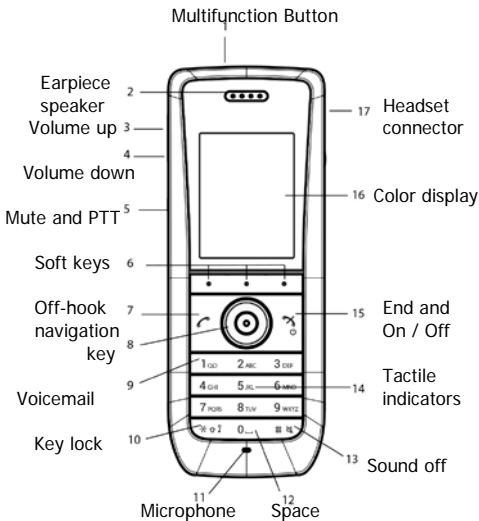

### Display Icons



Signal strength

Battery status

Keypad locked

Microphone off

Incoming call

Missed call

Outgoing call

Handset locked

Sound off

The IP DECT telephone IP65 is suitable for use in office environments. It can be operated on the innovaphone PBX as an extension line on its own or on the same extension number in addition to a desk top phone. The DECT connection enables the subscriber to move more than 100m away from the base station.

## **Register**

Please contact your administrator or local innovaphone partner in order to register the IP65 DECT telephone to the base station and the telephone system.

## **innovaphone PBX features**

The IP65 is intuitive to use on the basis of the above mentioned keys and symbols.

Additional features described here are available for use on the innovaphone PBX.

## **Switching between calls**

As soon as a call has been set-up, the right-and soft key takes on the function of the R key. Pressing this key puts the current call on hold and a second call can be set up. When both calls have been set up, press the R key and the number 2 on the numeric pad to switch between calls and thus to change which call is active.

## **Conference call**

In order to set up a conference call, two calls need to be set-up first - just like when switching between calls. Connect the conference calls by pressing the key combination "R" key (soft key) and the number three key. End the conference call by pressing the same keys. It is possible to end each call individually.



### **Search for contact (LDAP request)**

When the telephone is in idle mode, press the left-hand soft key to display the telephone menu. Navigate to the symbol "Contacts" and confirm. Search for any innovaphone PBX subscriber according to first and last name or telephone number via the menu item "Central Phonebook". These results can also be provided as long as the IP1202 base station has access to an LDAP server (database).

innovaphone AG  
Böblinger Str. 76, 71065 Sindelfingen, Germany  
Tel. + 49 (70 31) 7 30 09 - 0 Fax + 49 (7031) 7 30 09 - 99  
Chairman of the Supervisory Board Gebhard Michel  
Board of Management: Dagmar Geer (Chair)  
Carsten Bode, Guntram Diehl, Gerd Hornig  
Bank details: KSK Waiblingen  
IBAN: DE34 6025 0010 0007 2637 78,  
BIC/SWIFT: SOLADES1WBN  
VAT ID: DE186790876,  
Internet: [www.innovaphone.com](http://www.innovaphone.com)

Document identification number: PM000187A Ver. A